



## Wine Tube Installation

To replace your wine tube, you must remove the through-wall from your machine. To do this, first pinch off the nitrogen pinch clamp and release any pressure in the wine bottle. Now you may loosen the stainless steel clamp joining the flexible wine tube to the stainless steel siphon tube with a ¼" nut driver or a flat screwdriver. Once loosened, separate the wine tube from the stainless steel siphon tube. The plastic oversleeve and stainless steel clamp can now be removed from the end of the wine tube.

Leave the faucet attached to the through-wall during removal. Loosen the nut located directly behind the wing nut on the face of the cabinet with a 1 1/8" wrench. A ½ turn counter-clockwise should loosen the faucet and through-wall and allow them to spin out from the cabinet. *Note: there is a retaining nut on the inside of the cabinet under the inside insulation. If this nut turns with the through-wall, you must "lock" it in place to stop it from turning. You can do this with your finger, a flat screwdriver or similar device.* You can now pull the through-wall and wine tube through the hole in the cabinet.

Once the through-wall has been removed from the unit, carefully cut the old wine tube off without damaging the white nylon barb. You might be able to dip the barb and wine tube in hot water to help pull the old wine tube off.

To attach the new wine tube, dip the end, ¼" **ONLY**, in hot (not boiling) water. Remove it from the water and quickly push it on the barb. You may need to use food grade silicone spray to lubricate the barb for easier installation.

Reverse steps to reinstall.

### CONTACT WINEKEEPER

531 Mercantile Drive, Cotati, CA 94931

1.855.511.5113

info@winekeeper.com

www.winekeeper.com